innovators — international —

406 Centennial Park, Centennial Avenue, Elstree, WD6 3TN

For Domestic Use Only

Congratulations on purchasing your new Eleanor Double Folding Hanging chair.

Attached are the instructions for building this item. Please study the instructions carefully before starting. We hope you enjoy using this hanging cocoon.



ASSEMBLY	DESCRIPTION:			
INSTRUCTION	Eleanor Double Hanging Cocoon Chair YBG-8009			
15 Minutes	1.5m ²	2 PERSON ASSEMBLY		
APPROXIMATE ASSEMBLY TIME	REQUIRED ASSEMBLY SPACE	ASSLIVIBLI		
REQUIRED ASSEMBLY TOOLS	-	(INCLUDED)		

REQUIRED ASSEMBLY TOOLS

No.	Part	Qty	Image	No.	Part	Qty	Image	No.	Part	Qty	Image
A	4 legs base	2		В	Hanging Baskets	1		C	Steel legs	4	
D	Top pole	2	6	E	M8*62	2		F	M6*15	4	
G	M10*30	2	2	н	Wrench	1	S	I	Allen Wrench	1	
J	Bolt	2		к	Spring	2	a M	L	Chain	2	
М	"U" LOCK	2		N	Down Tube	1		0	Up Tube	1	
P	plastic cap	4	H	Q	Big Washer	2	0	R	Small Washer	2	0

Reminder: Please assemble to product on a soft carpet

ASSEMBLY INSTRUCTION

DESCRIPTION:

Eleanor Double Hanging Cocoon Chair YBG-8009

Read these instructions before you start

- Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
- For large items, please ensure that you have sufficient space and people to assemble your product safely.
- We recommend that, where possible, all items are assemble near the area in which they
 will be placed in use, to avoid moving the product unnecessarily once assembled.
- 5. Do not completely tighten bolts until all the bolts are properly fitted.
- During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use any power tools.

Care and Maintenance of your Furniture

- 1. Please periodically check all fittings are re-tightened as necessary.
- 2. Please do not drag of pull your furniture as this may damage it.
- 3. To clean, wipe with a damp cloth, do not use bleach, acid solvents or abrasive cleaners for frame parts. Dry with a dry clean soft cloth.
- 4. A furniture cover is recommended to extend the lifespan of the product.
- 5. The cushion is not waterproof and should be stored in a dry area when not in use.
- During varying weather conditions and winter period, we recommend that it is stored in a dry area. Please ensure that it is clean and dry.
- 7. In the event the metal frame is scratched exposing bare metal, treat with a rust repelling paint to avoid rusting.

Safety Instructions

- 1. Do not swing
- 2. Children should be supervised around item at all times.
- 3. Maximum weight limit 220KG



PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE



3

ASSEMBLY INSTRUCTION

DESCRIPTION:


Eleanor Double Hanging Cocoon Chair YBG-8009

Step 1

Attach leg base (A) to down tube (N) using bolts (G).

Slide plastic caps (P) onto the leg connection points on part (A) before attaching the legs (C) using bolts (F). Once secure, slide the plastic caps (P) over the join.


Do this for both halves of the chair frame.

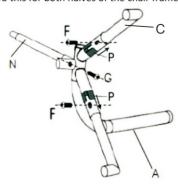

Step 2

Insert the top pole (D) into the leg base (A)

Connect both halves of the frame using component (O), and secure using bolts(E) and washer(R)

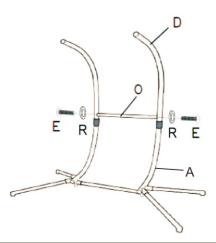

ASSEMBLY INSTRUCTION

DESCRIPTION:


Eleanor Double Hanging Cocoon Chair YBG-8009

Step 3

Insert bolt(J) and washer (Q) into the top of the frame and hook the spring(K) into the bottom of the bolt.

Use the U-Lock (M) to securely attach one end of the chain to the metal loop on top of the cocoon basket (B).

Hook the other end of the chain (L) to the spring (K).

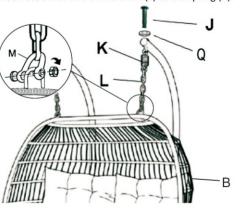

Step 4

Place cushion onto cocoon All bolts can now be firmly tightened Your Double Cocoon is now ready to use.

